

HOW TO USE

Power On	Open the cover of the case or Touch the L/R MFB for 3 sec
Power Off	Return the buds in the case and close the cover or Touch the L/R MFB for 6 sec
Answer call	Tap the Left or Right MFB once
End call	Tap the Left or Right MFB twice
Reject call	Tap the Left or Right MFB twice
Music play/pause	Tap the Left or Right MFB once
Previous song	Tap the Left MFB twice
Next song	Tap the Right MFB twice
Voice assistant	Tap the Left or Right MFB 3 times
Game Mode On/Off	Tap the Left or Right MFB 4 times

Reset: Take the earbuds out and tap the Left or Right MFB 5 times.

SPECIFICATIONS

Model	GOBUDS SPORT
Driver size	12 mm
Frequency Range	20 Hz-20kHz
Sensitivity	98dB±3dB
ENC	Environmental Noise Cancellation
Case Battery Capacity	400 mAh
Earbuds Battery Capacity	2x35mAh
Total Playtime	52 Hours
Earbud Playtime	About 7 hours
Full Charge for case	45-60 Mins
Charging Port	Type C
Input Voltage	5VDC, 1A
Water Resistance	IPX5
Bluetooth	V5.3
Transmission Dist.	10m
Gaming Mode	80 ms Latency

Multi Function Button (MFB)



MONO MODE

- Both earbuds can be used in Mono mode. More specifically, you can remove from the case either earbud and it will be paired automatically to the previously paired device.

- To switch between the earbuds, you can put the initial earbud on the case. Then take the second earbud out, and it will automatically pair.

Notes: To switch to stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously used earbud, hence enabling stereo usage.

You cannot skip tracks or return to the previous tracks in Mono mode

COMFORT DESIGN

Flexible and secure hook design, Gobuds sport ensures a comfortable and reliable earbud experience, proven by rigorous testing with athletes to guarantee stability during both workdays and workouts.



Comfortably fitting on Ear

SAFETY INSTRUCTIONS

- Please read, follow and keep these instructions. Heed all warnings on the product and in the instructions for use.
- Stop using this product immediately if it causes discomfort or pain. When using this product, it is recommended that you limit the volume to help avoid causing harm to your ears and danger resulting from being unable to hear what is going on around you.
- Keep the device out of extreme heat and humidity. Do not use the device near water, such as sinks, bathtubs, swimming pools, washing machines, tubs of water, etc.
- Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as petrol/refueling stations, hospitals, blasting areas, potentially explosive atmospheres, and aircraft.
- Using earbuds while driving can distract you and increase the likelihood of an accident. If driving conditions demand it (such as bad weather, high traffic density, presence of children in the car, difficult road conditions), pull off the road and park before making or answering calls.
- Battery life may differ depending on personal habits.
- This appliance should be used in moderate climates.

WARNING

- To prevent potential hearing damage, do not listen to high volume levels for long periods.
- Do not turn the volume up too high; doctors warn against prolonged exposure to high volumes.
- Stop using the product or lower the volume if you feel your ears ringing. Prolonged listening at high volumes could lead to hearing damage.



GoBuds Sport

True Wireless Earbuds

Bass ka Boss

Get ready for MORE, for a LIFE of WOW with your all new GoBuds Sport. We strongly recommend you go through this manual entirely before beginning to use the product, as it contains important technical information to ensure a seamless audio experience. It can also be referred to in times of difficulty.

PACKAGE CONTENTS

- 1 x GoBuds Sport
- 1x Charging Case
- 1 x Type C Charging Cable
- 1 x Warranty Card
- 1 x Manual
- 2 x Additional Ear Muffs

CHARGING

- Earbuds are partially charged. Please ensure you fully charge them before you use them for the first time.
- To charge the case, plug the one end of the charging cable into the case and the other end into a USB port.
- Blue light indicates that the charging case is being charged.


Note: The LED lights located on the charging case indicate the battery status of the case.

Charge the GoBuds Sport at least once in month when they are not in use for a long time.

PAIRING DEVICE

Follow these steps for a successful pairing:

- After opening the charging case, the earbuds enter into pairing mode with the available devices around, while blue and red light flashes alternately.
- Select from the list of the available bluetooth devices the GoBuds Sport, while keeping the earbuds close to your device.
- Earbuds indicator will stop flashing, indicating the successful pairing.
- GoBuds Sport will automatically be connected to the paired device, every time you remove them from the charging case.

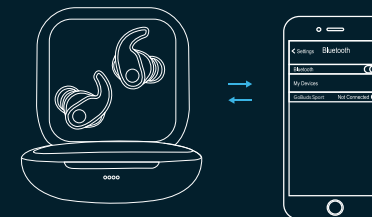

GO
VO