



GOBOLD 410



Headphone

Get ready for MORE, for a LIFE of WoW with your all new GOBOLD 410. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

PACKAGE CONTENTS

- 1 x Headphone
- 1 x AUX cable
- 1 x Charging cable
- 1 x User manual
- 1 x Warranty card

PRODUCT OVERVIEW

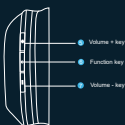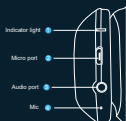

- 1 Indicator light
- 2 Micro port
- 3 Audio port
- 4 Mic
- 5 Volume + key
- 6 Function key
- 7 Volume - key

SPECIFICATIONS

Model	GOBOLD 410
Bluetooth version	5.2
Charging port	Mircro USB
Impedance	32Ω±15%
Frequency Range	20~20KHz
Battery Capacity	400 mAh
Call time	About 15hours(70% Vol)
Input Voltage	5VDC,1A max.
Charging Time	1-2 hours
Bluetooth profile	A2DP, AVRCP, HSP, HFP
Sensitivity	109±3dB
Wireless working range	10M (Without obstacles)
Music playing time	About 15hours(70% Vol)

CHARGING

- 1 The red light is on during charging, and the red light is off as the charging is completed.
- 2 Use the included charging cable.

LED LIGHT DISPLAY

Operation	LED Display
Low Battery	Red light flashes
Bluetooth is connected	Blue light flashes slowly
Bluetooth is not connected	Red and blue lights flashes quickly

Important Safety Instructions

- 1 If this product is not used for a long period of time, it's recommended to recharge it at least once a month to extend its life and maintain the normal use performance.
- 2 Keep the product in a dry location.
- 3 To clean the product, use a lightly dampened cloth in water to clean the exterior in-case it gets dirty.
- 4 Do not disassemble this product. It contains no user serviceable parts.

PHYSICAL BUTTON CONTROL

Startup /Shutdown	Long press function key for 2-3s (On) Long press function key for 3-5s (Off)
Pairing	Long press function key for 3-5s until red and blue lights flash alternately, pairing starts.
Volume up	Long press "+"key to increase the volume
Volume down	Long press "-"key to decrease the volume
Play/Pause	Tap the function key once
Next / Previous song	Tap "+"key once / Tap "-" Key once
End call	Tap the function key once
Call back	Tap the function key twice
Voice Assistant Support	Hold the function key for 2 Seconds

Caution

- 1 Do not drop your headphones.
- 2 Headphones shall not be exposed to dripping or splashing
Do not allow your headphones to be submerged in water.
- 3 Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives. If cleaning is required use a soft cloth, if necessary dampened with a minimum amount of water or diluted mild soap, to clean the product.
- 4 The integrated battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 5 Replacement of a battery is not advisable.
- 6 Disposal of a battery into an oven or mechanically/ crushing or cutting of a battery can result in an explosion.
- 7 Never use your headphones when you are operating a motor vehicle, riding a bicycle.

Life's too short for "ok". Too short to have stuff in our lives that's "ok, I guess".
"But-I'm-almost home!" battery life. "But-it-only-fell-off-the-table" build quality. "Has-someone-stolen-the-bass?" sound quality.
We say NO to "ok". In 2021, we set out to make stuff that's better in little ways that make a big difference.
Stuff for people who expect more. Who want the songs to keep playing until they're home. Who are on a mission to stay up all night. Who want to know they'll feel great and look awesome, every day.
For people who want every day to be a 'WoW' day.